

DESCALER

MIELE DESCALER FOR MACHINES

Effectively removes harmful limescale deposits from your dishwasher and washing machine. Citric acid-based Miele descaling granules. pH 1.5

⚠ Always proceed with caution when using descalers.

APPLICATIONS

Suitable for Miele dishwasher and washing machines.

Treats heating rods and other components gently.

Ensures optimum machine performance.



Product	PMCM1040
Size	250G

INSTRUCTIONS

For Washing Machines:

Empty the full contents into the empty drum of the washing machine (without any laundry inside). Start the cotton programme at 90°C or 95°C without a pre-wash.

For Dishwashers:

Start the pots and pans programme (75°C) without any dishes inside. After the pre-wash is complete (20 minutes), add the entire package contents for the main wash cycle.

TIPS

- Depending on water hardness and use, recommended use is 1 - 3 times per year

TO ORDER

Shop online www.eyservices.com

Call +33 (0)4 89 02 43 40

Email info@eyservices.com

Whilst every effort has been made to ensure the accuracy of the information supplied herein, Earthly Supply Company cannot be held responsible or liable for any damage or injury arising from the use or misuse of these products.