MACHINE CLEANER

ECOZONE WASHING MACHINE & DISHWASHER CLEANER

Protect kitchen appliances with our eco-friendly Washing Machine & Dishwasher Cleaner. It's specially formulated to clean and freshen by getting rid of stubborn limescale and detergent that have built up over time. That way, your machine can keep performing at its best. The eco-friendly formula will leave your appliance free of nasty odours and as clean as a whistle. 6 tablets, fresh lemon scent. pH 6 - 9

APPLICATIONS

Removes limescale, cleans and freshens.



Product PMCEZ01

Size 135g & 720g

INSTRUCTIONS

For washing machines:

Step 1

• Pop a tablet into the drum of your empty machine

Step 2

• Run a hot (60degC plus) cycle without pre-wash

For dishwashers:

Step 1

 Pop a tablet onto the bottom of the empty machine

Step 2

Run a hot wash without a pre-rinse

TO ORDER

Shop online www.eyservices.com
Call +33 (0)4 89 02 43 40
Email info@eyservices.com

Whilst every effort has been made to ensure the accuracy of the information supplied herein, Earthly Supply Company cannot be held responsible or liable for any damage or injury arising from the use or misuse of these products.