

As a Washing Machine Descaler: 1) Pop a tablet into the drum of your empty machine. 2) Run a hot (60 C plus) cycle without a pre-wash.

As a Dishwasher Descaler: 1) Pop a tablet onto the bottom of the empty machine. 2) Run a hot wash without a pre-rinse.

There is no need to unwrap the tablet – the packaging is soluble!

For washing machines

1. Pop a tablet into the drum of your empty machine
2. Run a hot (60°C plus) cycle without a pre-wash


For dishwashers

1. Pop a tablet onto the bottom of the empty machine
2. Run a hot wash without a pre-rinse

There is no need to unwrap the tablet – the packaging is soluble!



Before...
limescale and
detergent
build up

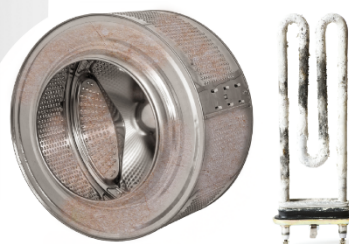

After...
clean and
odourless
machines



Clean your washing machine and dishwasher every month with one tablet to keep them in tip-top condition. Add our Magnoball to your laundry or dishwashing loads – it'll help prevent limescale build-up.

Ecozone Ltd does not assume any responsibility for damage resulting from using this product.